

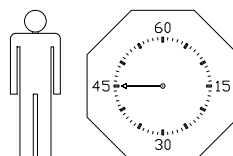
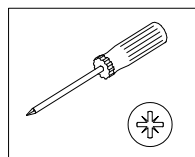



Benötigte Werkzeuge – Outils Nécessaires – Tools Required – Attrezzi Necessari

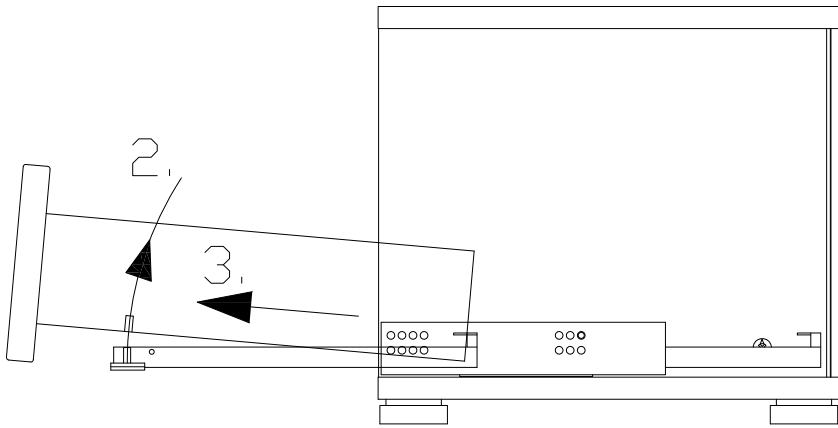

1.

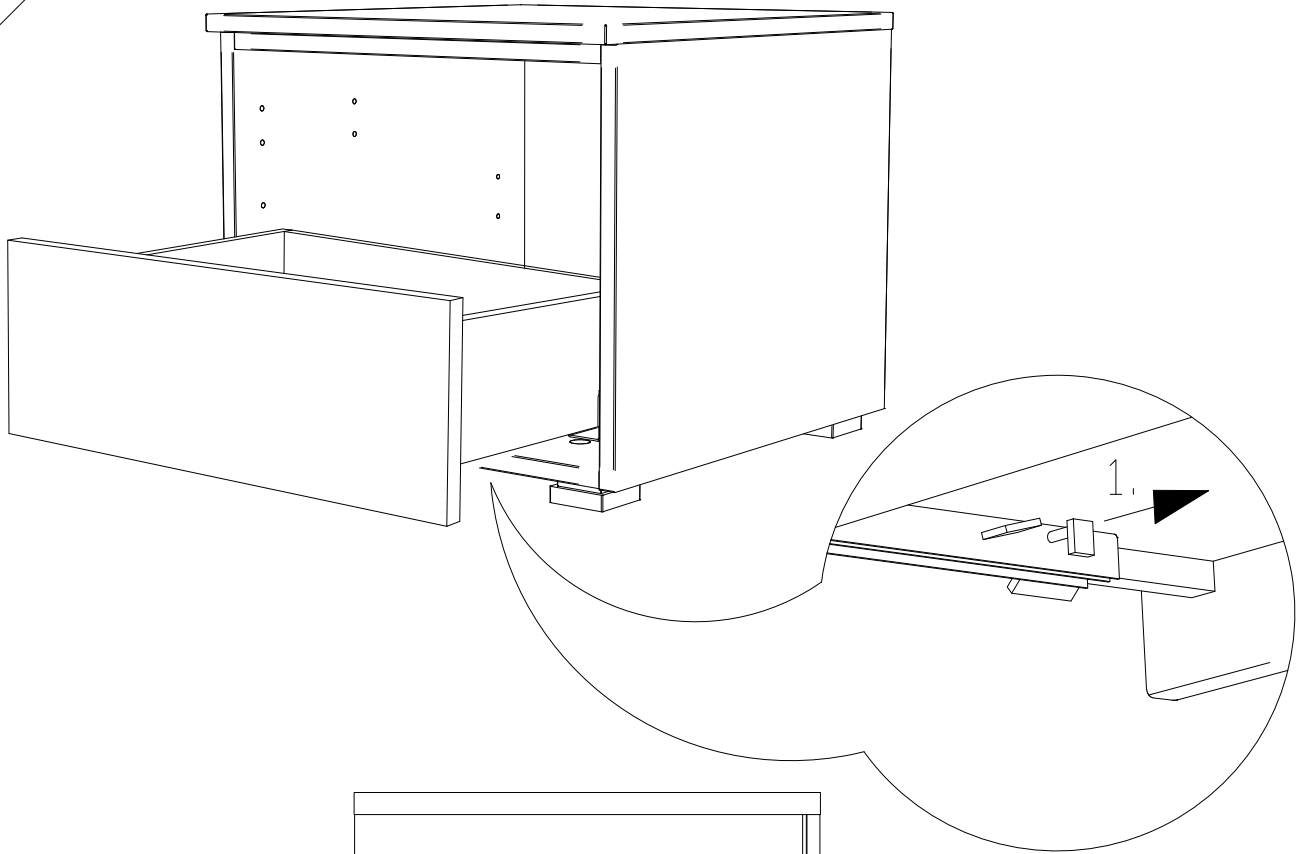


5.

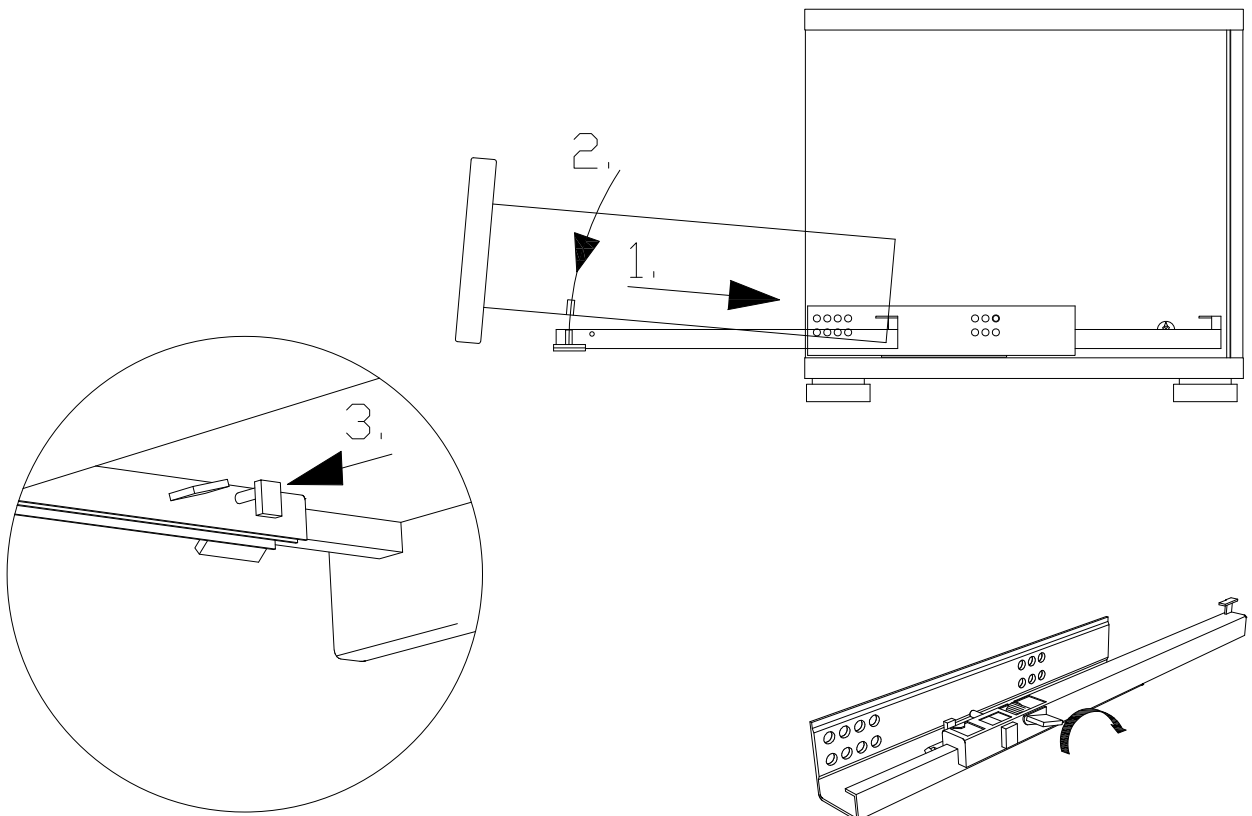


Owita

E x1



J x8

Ø4x25




631.30900

I x4




631.20100

V x4





631.20200


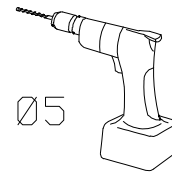


Ø5



2.

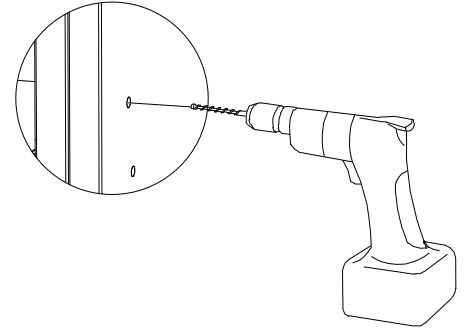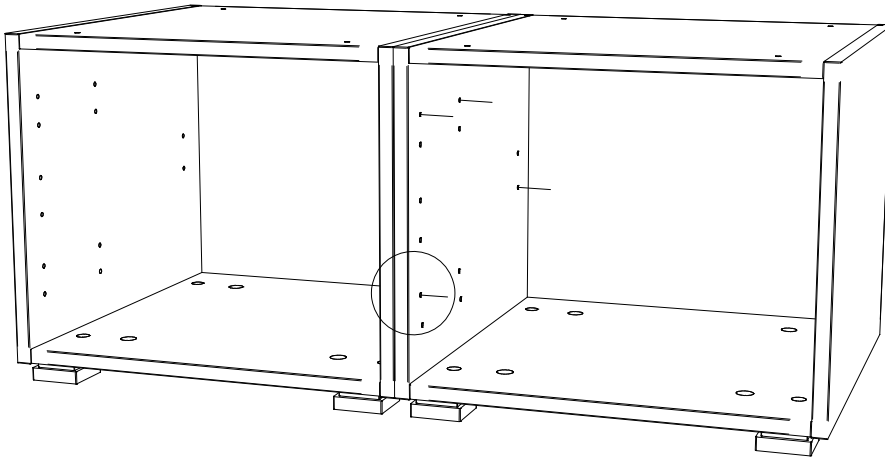

3.

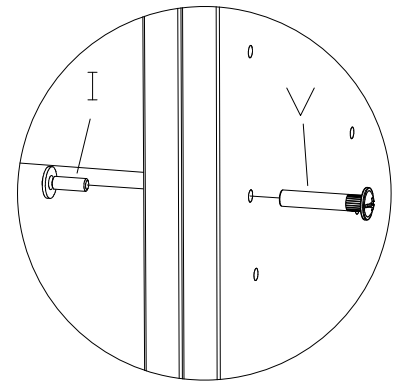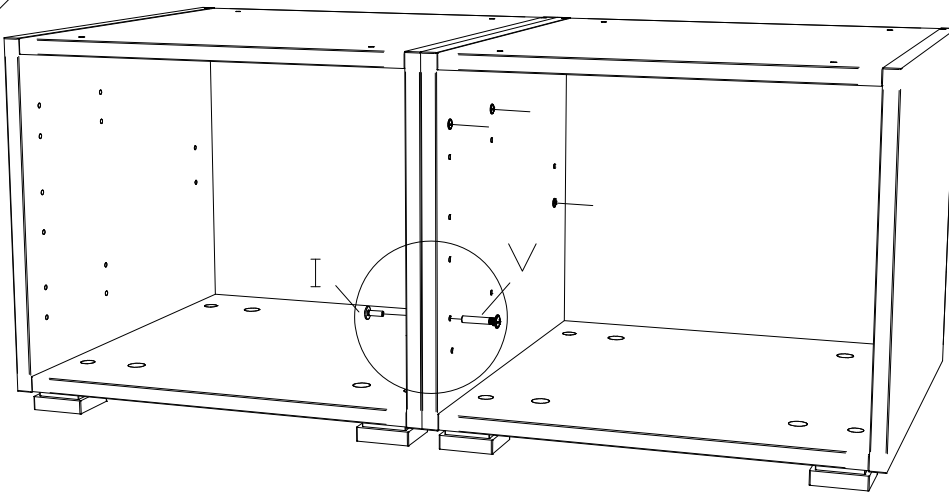

4.

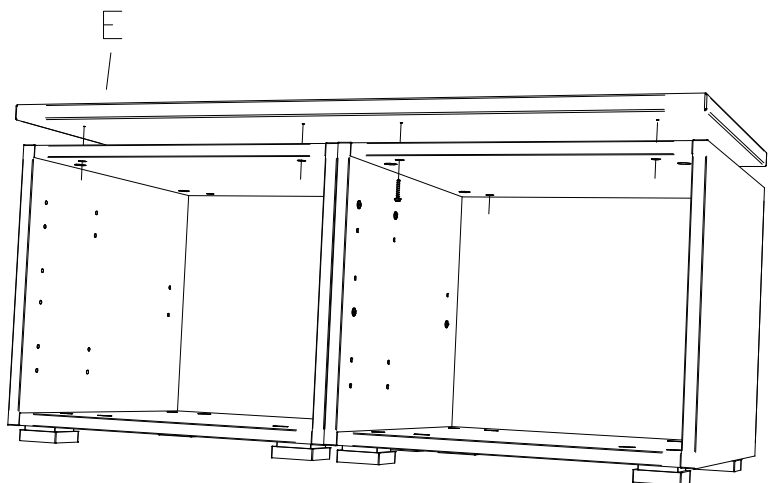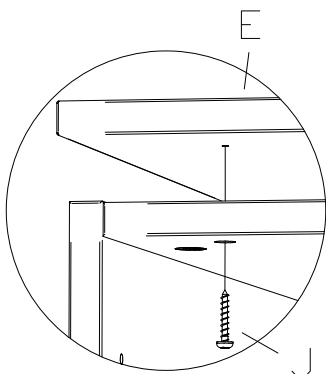


Dowio

E x1



J x8

Ø4x25



631.30900

I x4




631.20100

V x4





631.20200


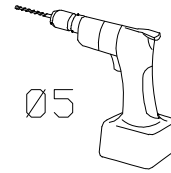


Ø5



2.

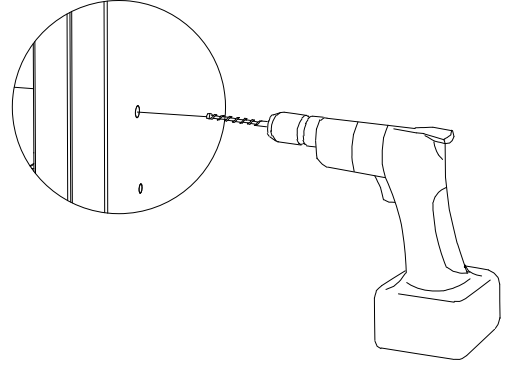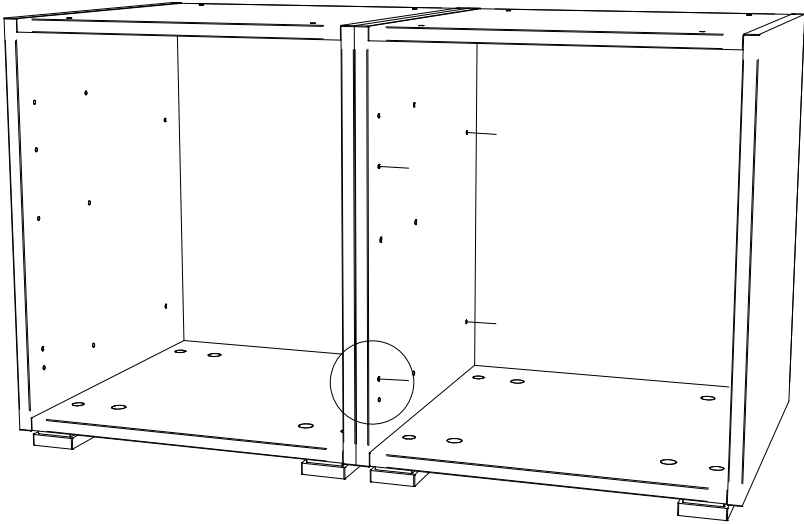

3.

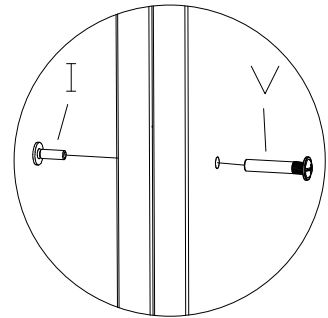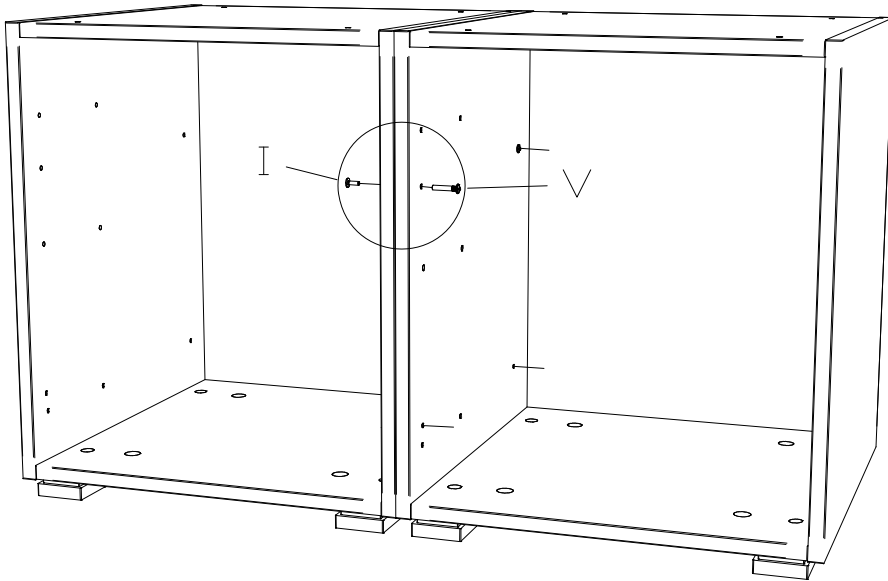

4.

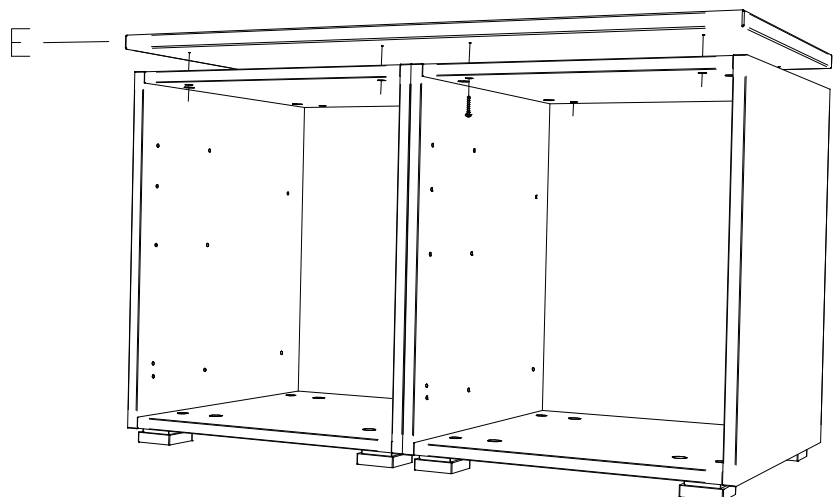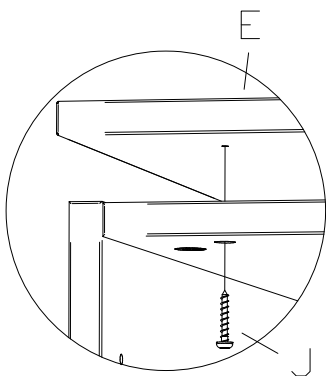

660.01322


Qunito Quatrine Portina Totrino Cassino Incentro Trequatri

E x1



J x8

Ø4x25



631.30900

I x4




631.20100

V x4





631.20200


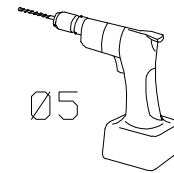


Ø5

2.

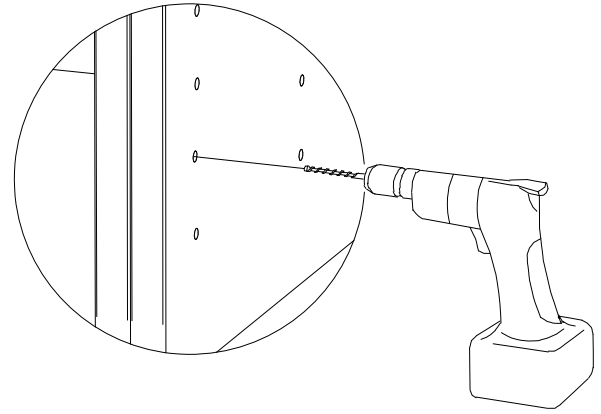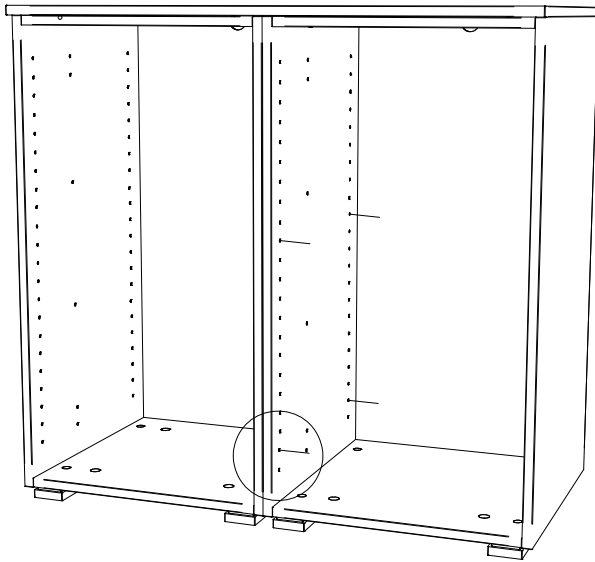

3.

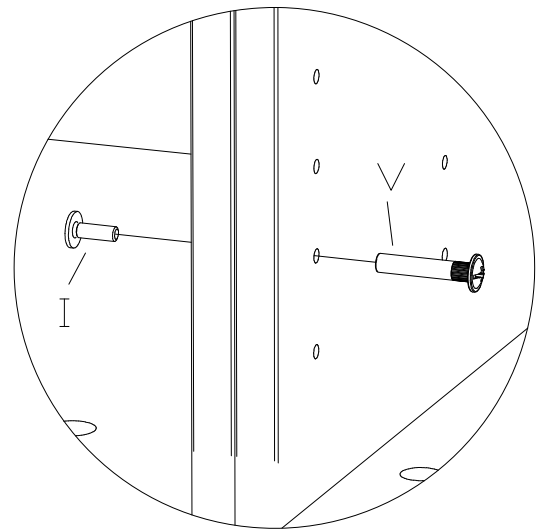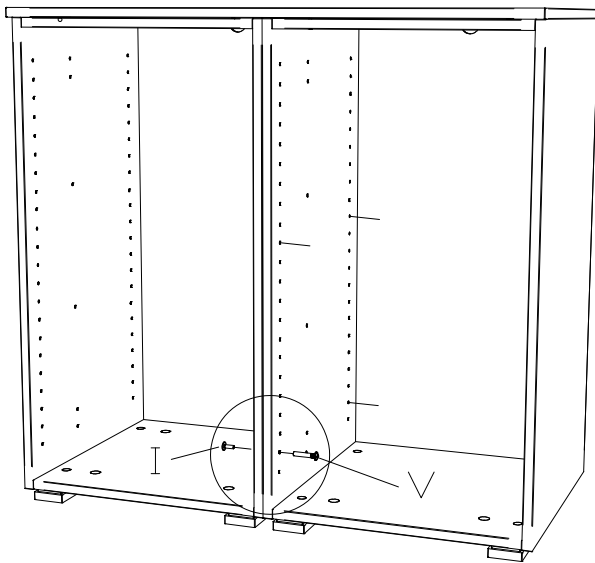

4.

