



(D) Videounterstützte Montageanleitung

(TR) Video destekli kurulum talimatları

(RU) инструкция по монтажу с помощью видеосигнала

(RO) Instrucțiuni de instalare acceptate video

(GB) Video-assisted assembly instructions

(IT) Istruzioni di montaggio video-assistite

(CZ) Instalační pokyny podporované videem



(PL) Instrukcje montażu wspomagane sygnałem wizyjnym

(FR) Instructions de montage assistées par vidéo

(NL) Video-ondersteunde montage-instructies

(HU) Video-támogatott telepítési utasítások

(SK) Inštaláčn  pokyny podporované videom








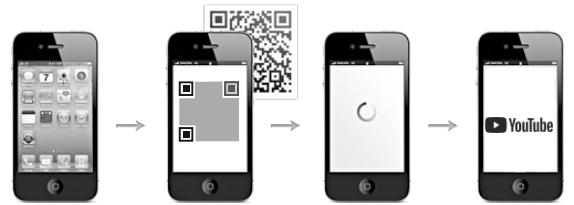
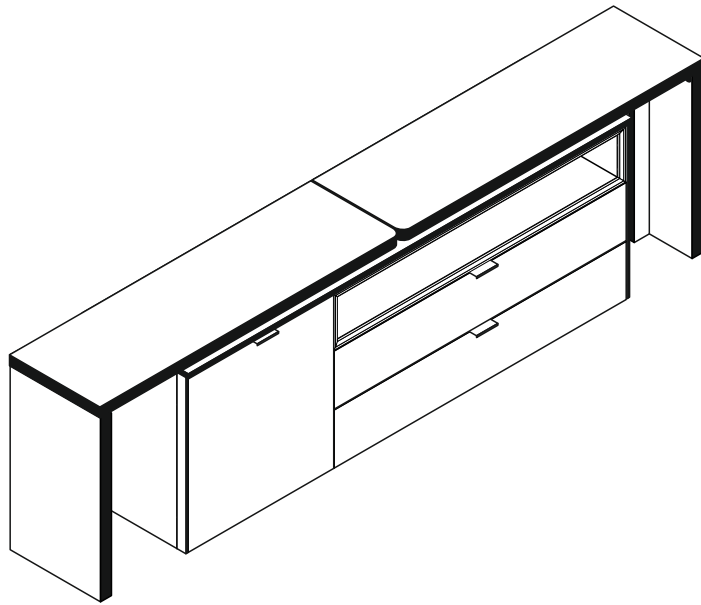


0730_12-T

REPC-Nr.:

Sideboard mit Schreibtisch



Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба

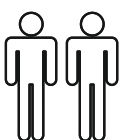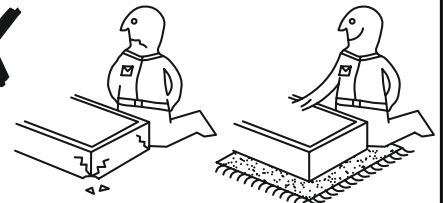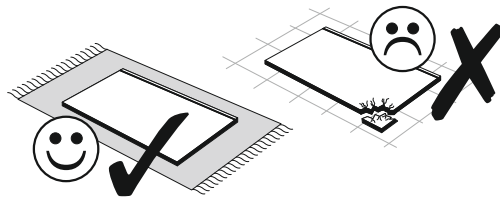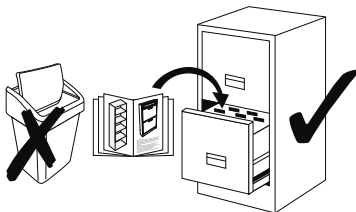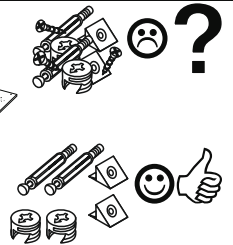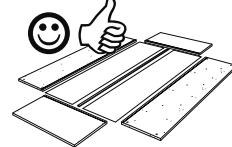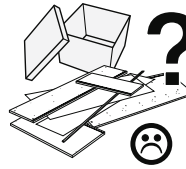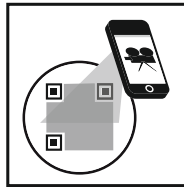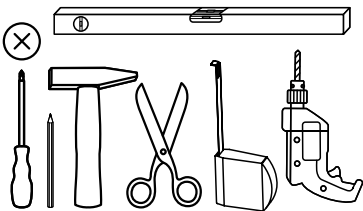

Das Ersatzteil-Anforderungsformular finden Sie auf <https://www.maeusbacher.de/ersatzteile/>

Beutel 1/3

1-10 2x	6,3x50	1-30 50x	3x16	1-37 4x	4,5x25	1-70 4x	3x30
1-80 12x	3,5x13	1-90 20x	3,5x20	1-130 20x	4x27	1-200 8x	6,3x13
1-240 1x	SW 4	1-295 2x	M 6x50	2-08 8x	h=12mm	2-10 48x	h=12mm
2-20 56x	2-20	2-160 4x	2-160	2-215 1x	2-215		

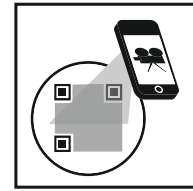


Beutel 2/3

3-07 1x		3-11 2x		3-42 2x	8er
------------	--	------------	--	------------	-----


Beutel 3/3

1-325 3x		2-103 14x	8x30	2-105 8x	8x45	2-177 4x		5-20 14x		5-130 5x	
5-185 20x		6-421 3x		10-115 2x	M 6						


Colli 1/3




1151 x 377




228 x 367




1120 x 367

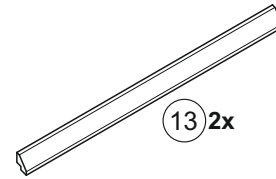


1163 x 25



1123 x 350




708 x 34




568 x 365




232 x 25



732 x 60




732 x 60

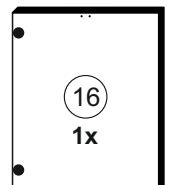


704 x 580




1163 x 232



350 x 120




1111 x 120



350 x 120

Colli 2/3




22 2x



23 2x




31 8x



1120 x 367



734 x 360




1200 x 360




1200 x 360


Colli 3/3




692 x 377




568 x 377




1734 x 377




708 x 377




708 x 377








1768 x 413



1746 x 353



500 x 50

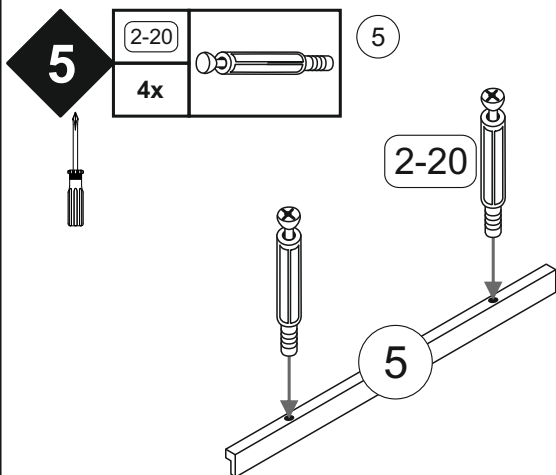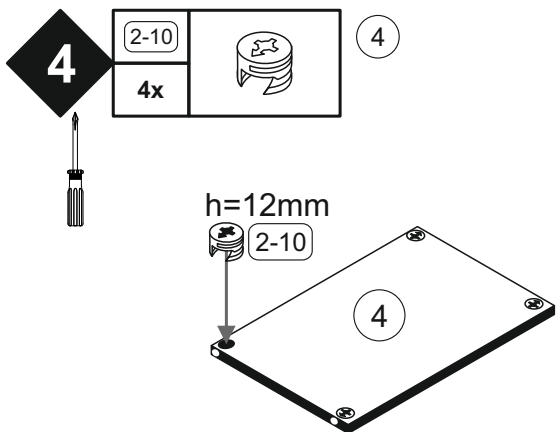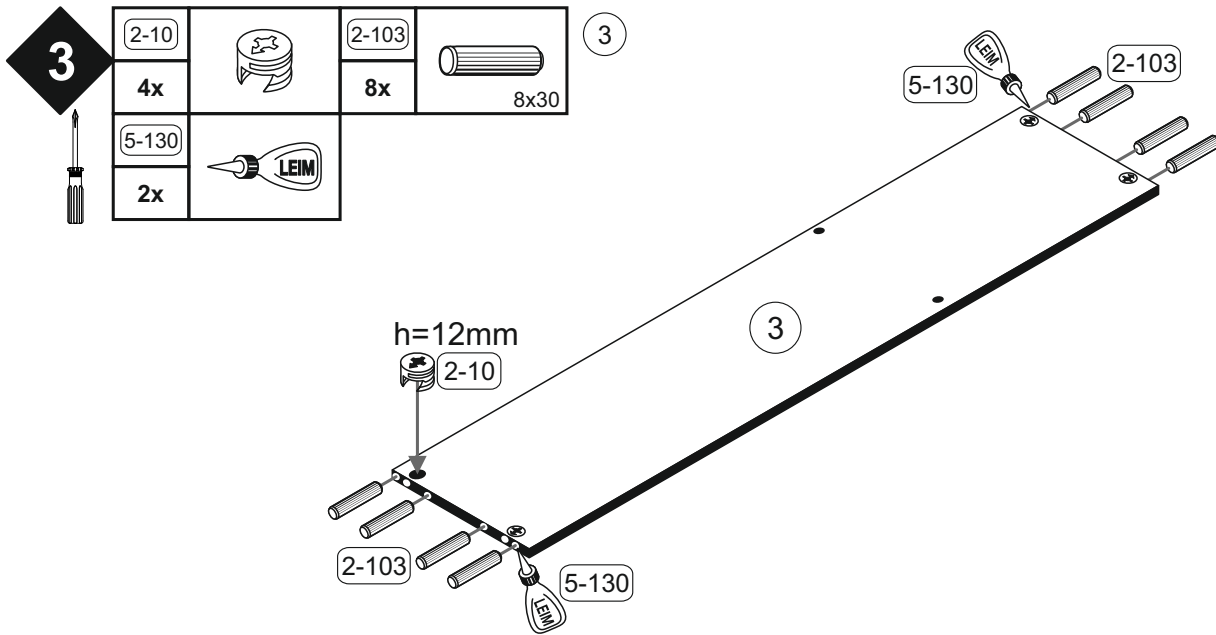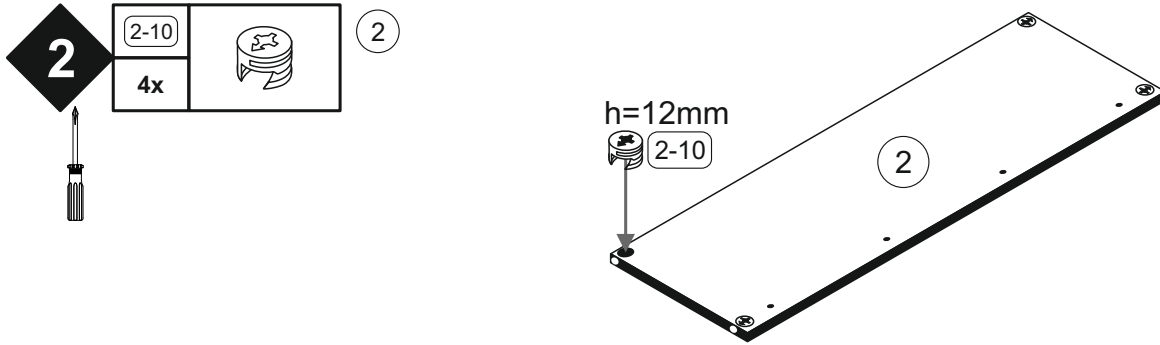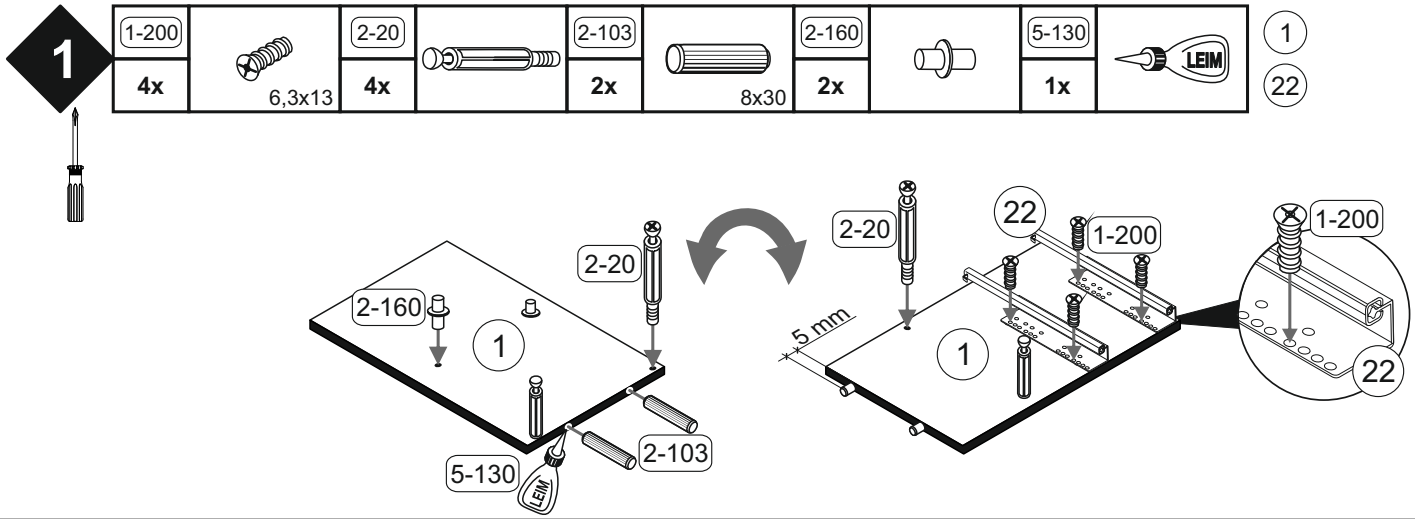

6

2-10		2-20		2-103		2-160		5-130		3-11	
2x		4x		2x	8x30	2x		1x		2x	

7

1-200		2-10		2-20		2-103		5-130		5	7
4x		2x		4x		2x	8x30	1x			23

8

2-10		10
7x		

9

2-10		12
7x		

10

2-10		2-20		11
4x		8x		


11

2-20		13
10x		14

12

1-80		3-42	
4x	3,5x13	2x	8er

16

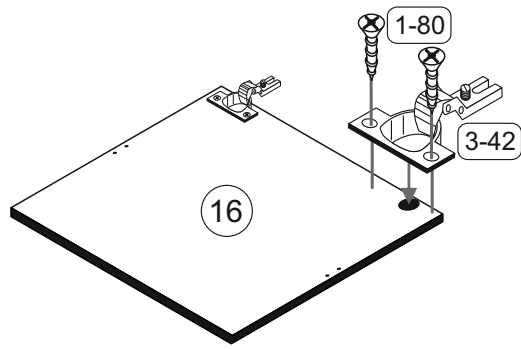

13


1-80		2-08		2-20		6-421	
4x	3,5x13	8x	h=10mm	8x		2x	

17 19
21

14

1-70		1-90		5-185	
4x	3x30	16x	3,5x20	16x	


17 18 19
20 21

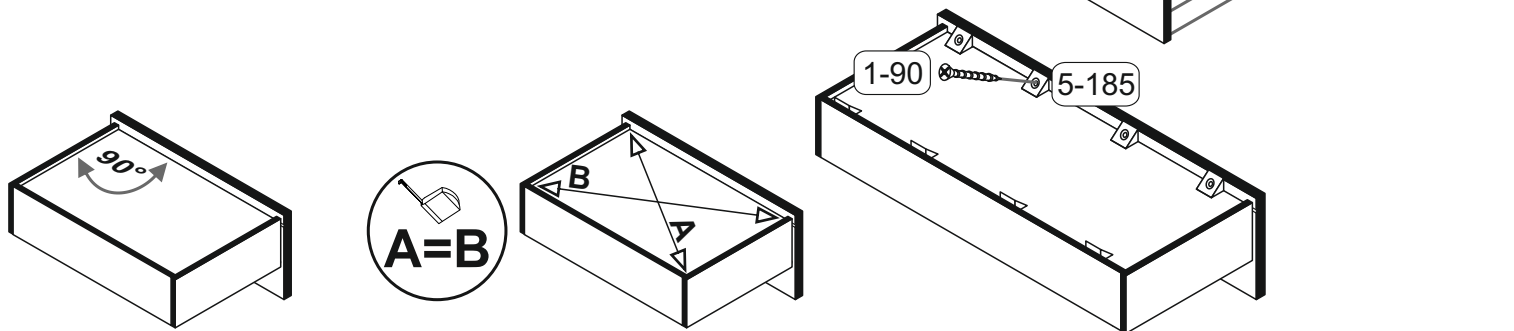


15


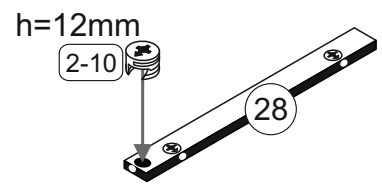
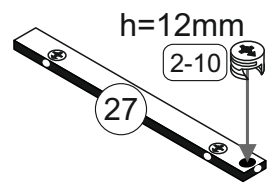
2-10		2-20	
8x		4x	
2-105		5-130	
8x	8x45	2x	

26

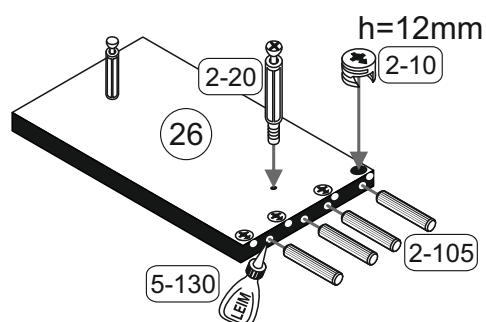





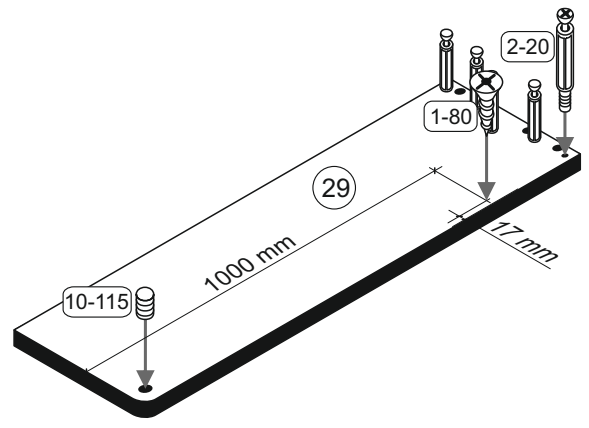
16

2-10		27
6x		28











17

1-80		2-20		29
1x	3,5x13	5x		
10-115				
1x	M 6			






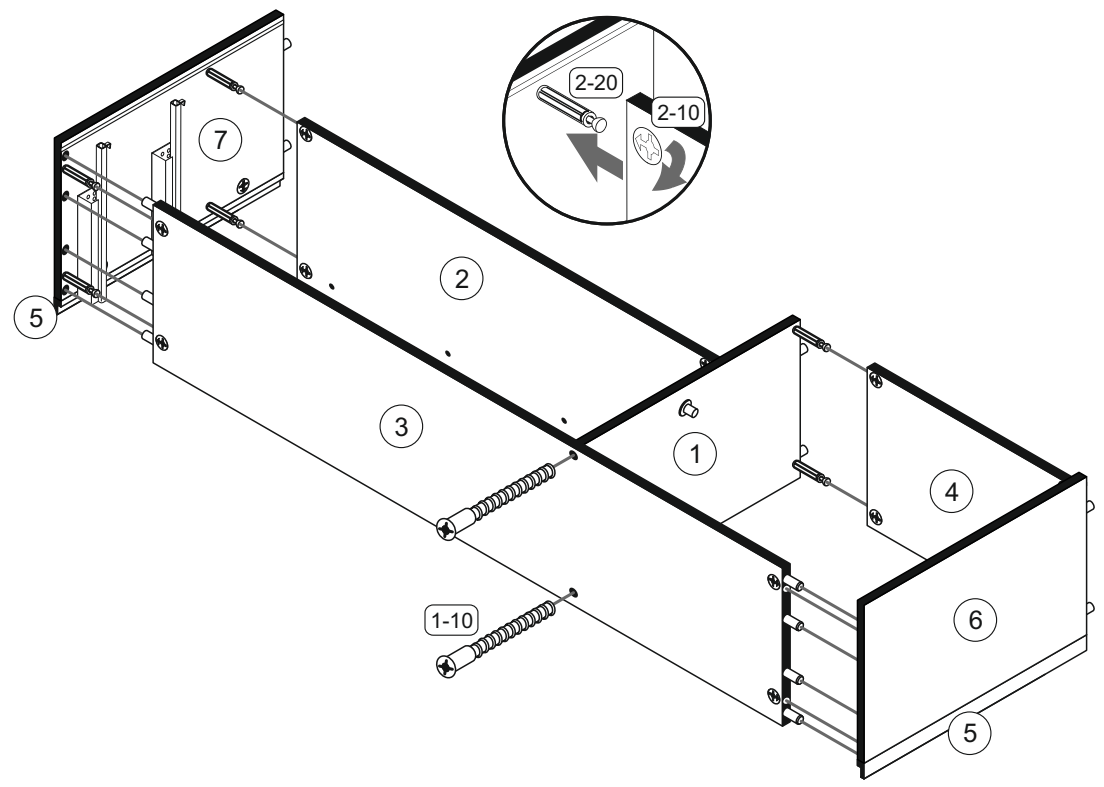
18

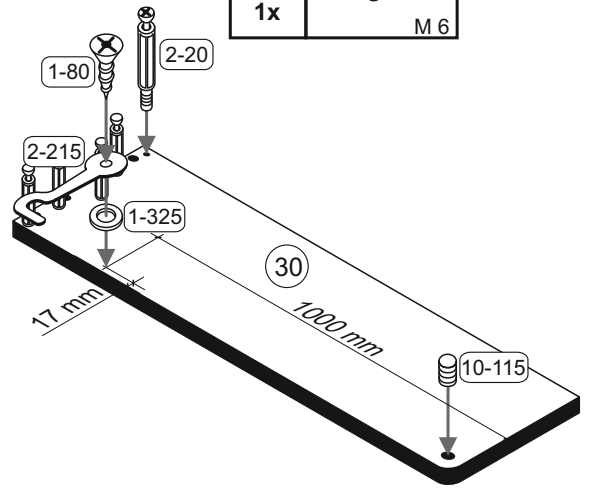1-80		2-20		30
1x	3,5x13	5x		
2-215		1-325		
1x		10-115		
		1x	M 6	




19

1-10	
2x	6,3x50






20




1-30	1-90	1-130	5-185
40x	3x16	4x	3.5x20
		16x	4x27
			4x

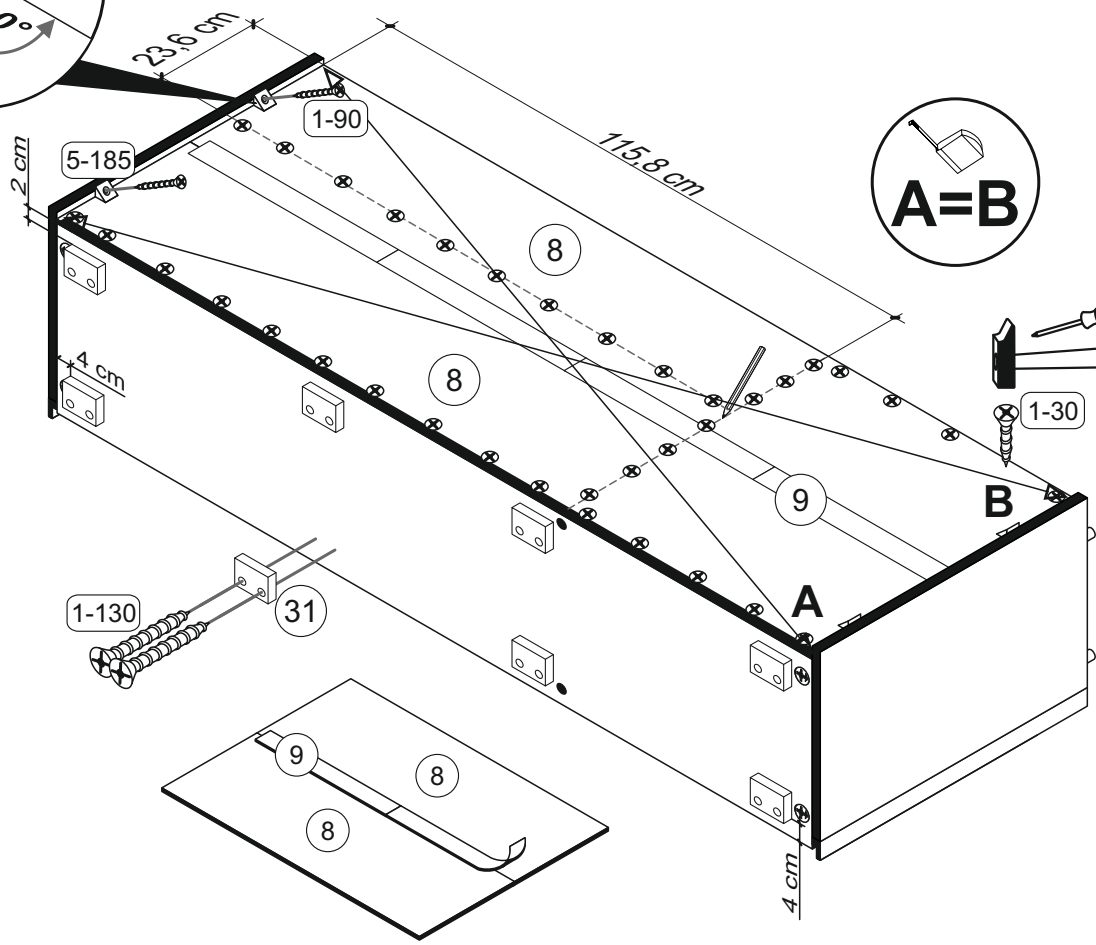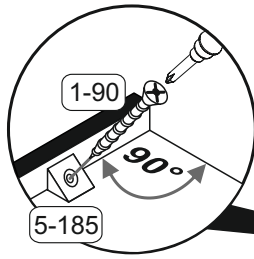



21

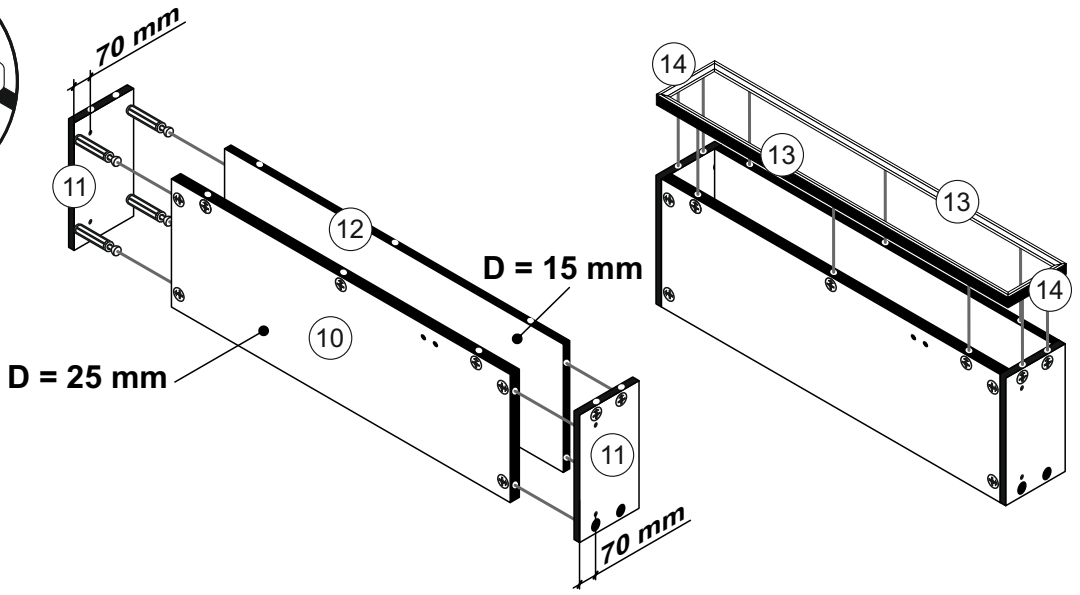
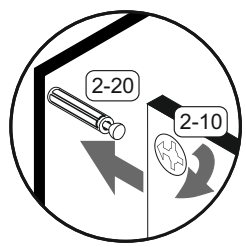


22

1-30		1-37		1-130	
10x	3x16	4x	4.5x25	4x	4x27

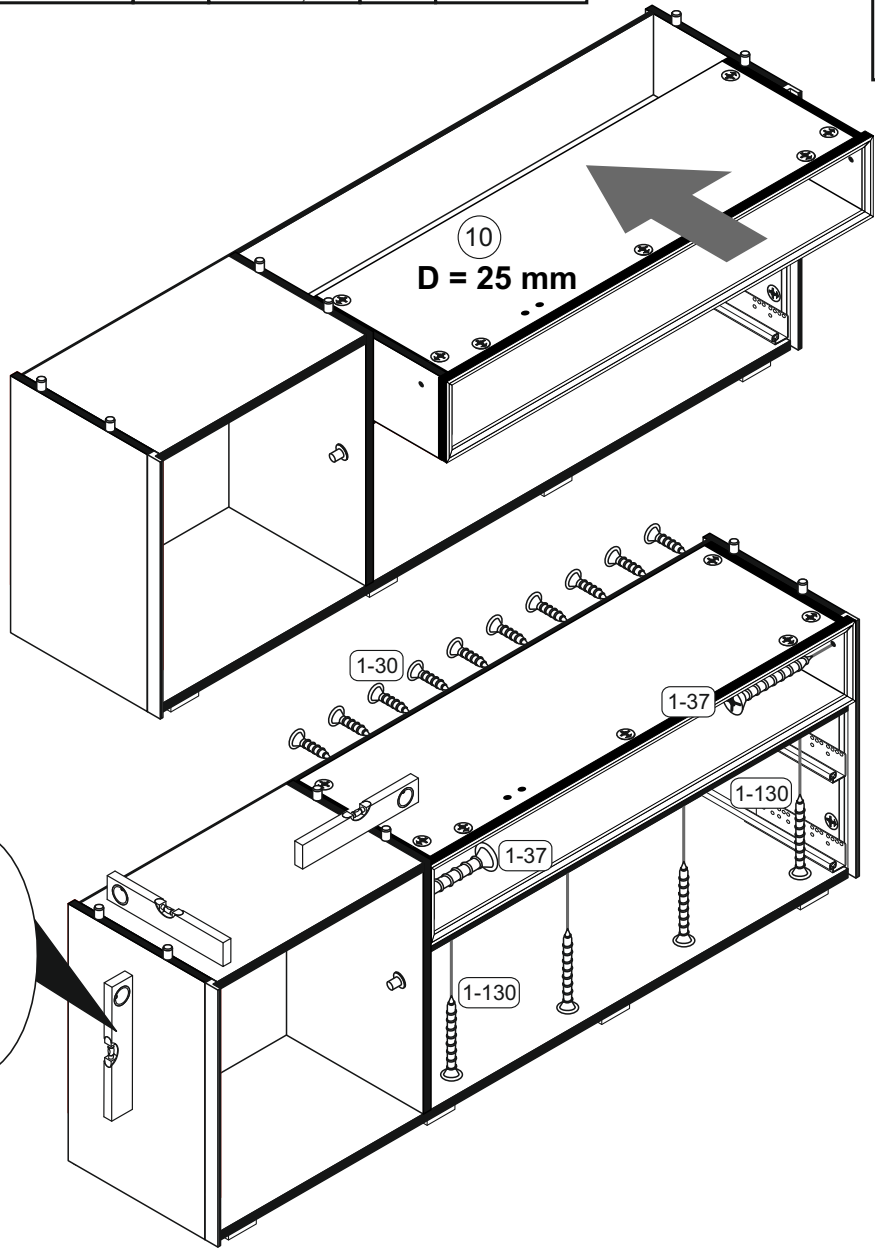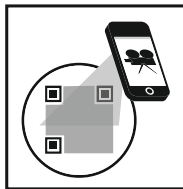


23




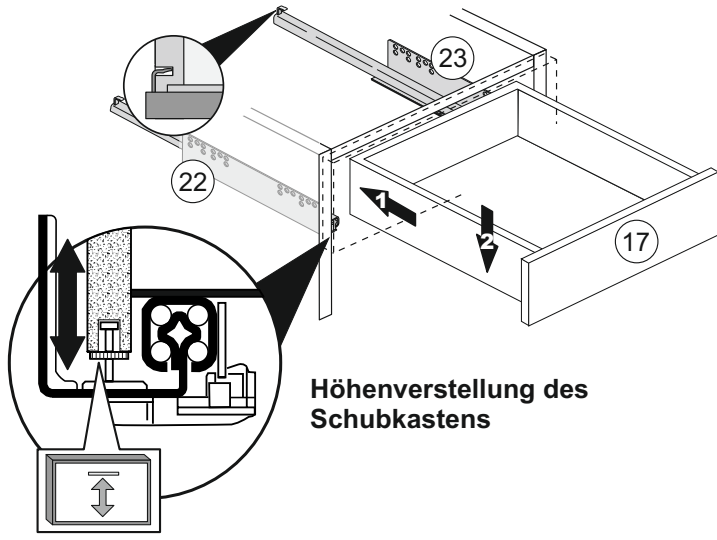
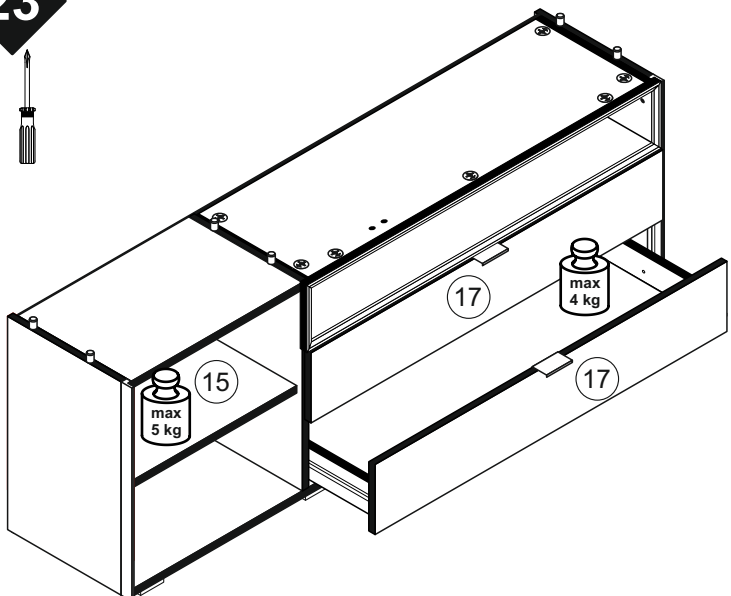


Höhenverstellung des Schubkastens


24	1-80	3,5x13	3-07	
	2x		1x	
	5-130	LEIM	6-421	
	1x		1x	

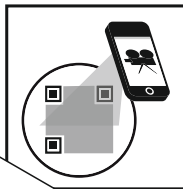




Montage der Tüрдämpfung

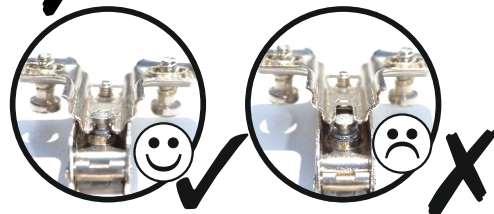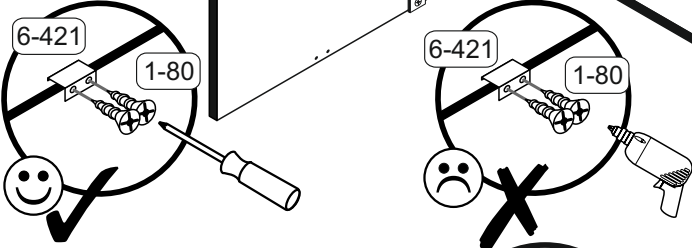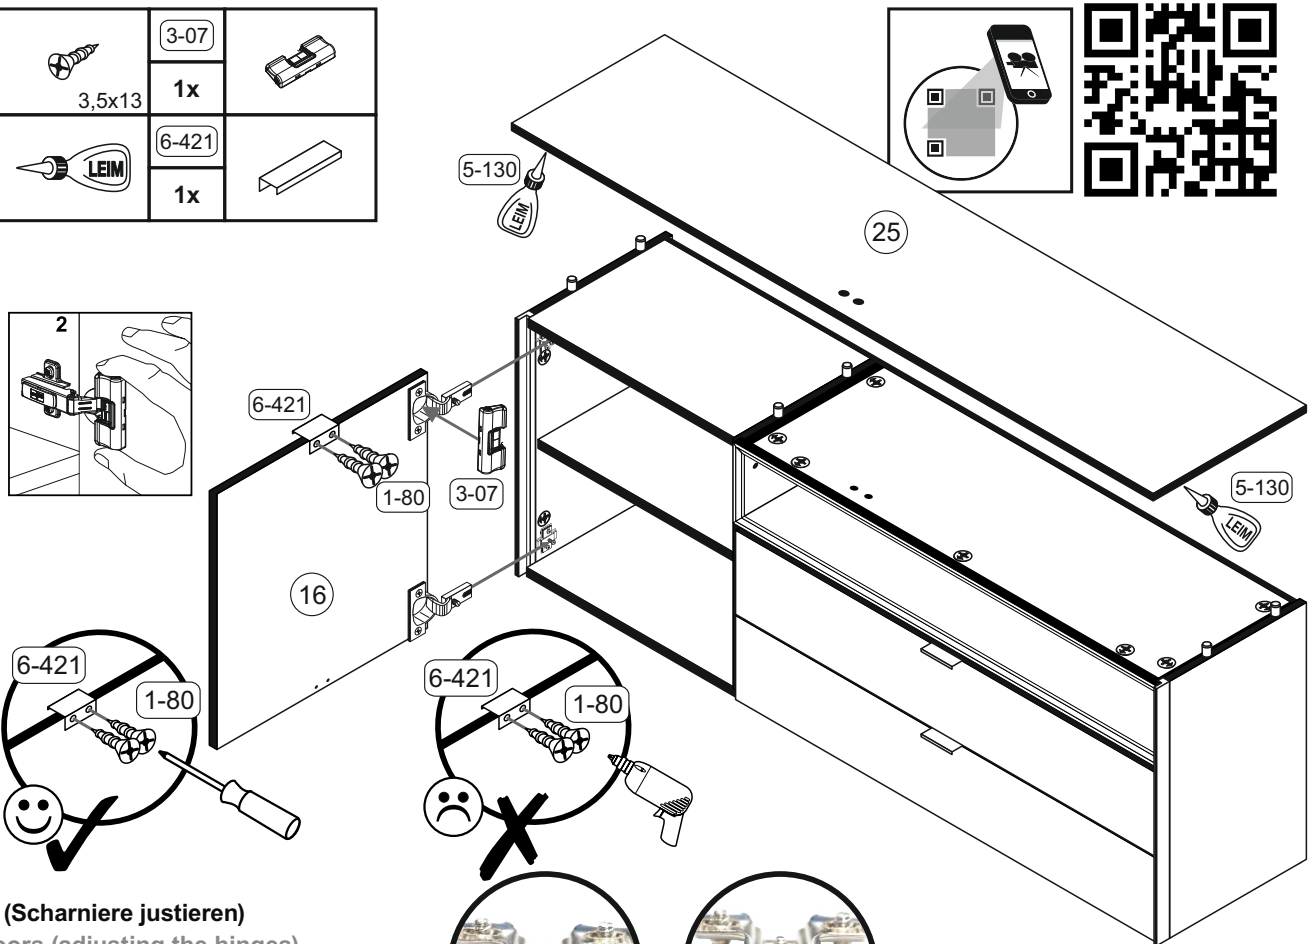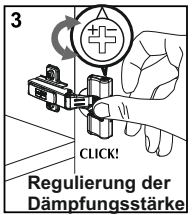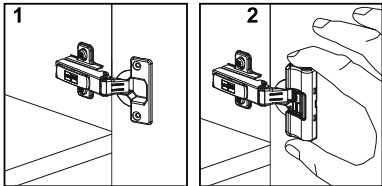

- Türen einstellen (Scharniere justieren)
- Adjusting the doors (adjusting the hinges)
- Régler les portes (ajuster les charnières)
- Sistemare le porte (regolare le cerniere)
- Deuren instellen (scharnieren afstellen)
- Nastawić drzwi (wyregulować zawiasy)
- Vyrovnejte dvířka (seřid'te závěsy)
- Nastavenie dverí (nastavenie závesov)
- Állítsa be az ajtókat (állítsa be a zsanérokát)
- Reglare uși (ajustare balamale)
- Kapıların ayarlanması (mentşelerin seviye ayarı)
- Регулировка дверей (регулировка шарнира)

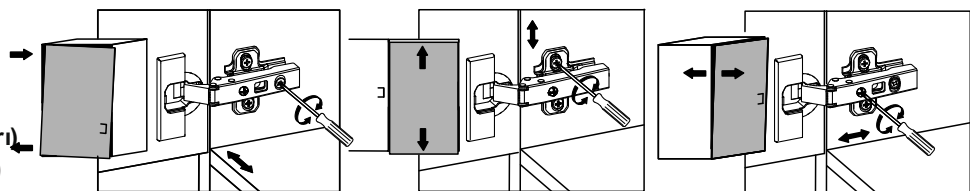


25	2-177		5-20	
	4x		14x	

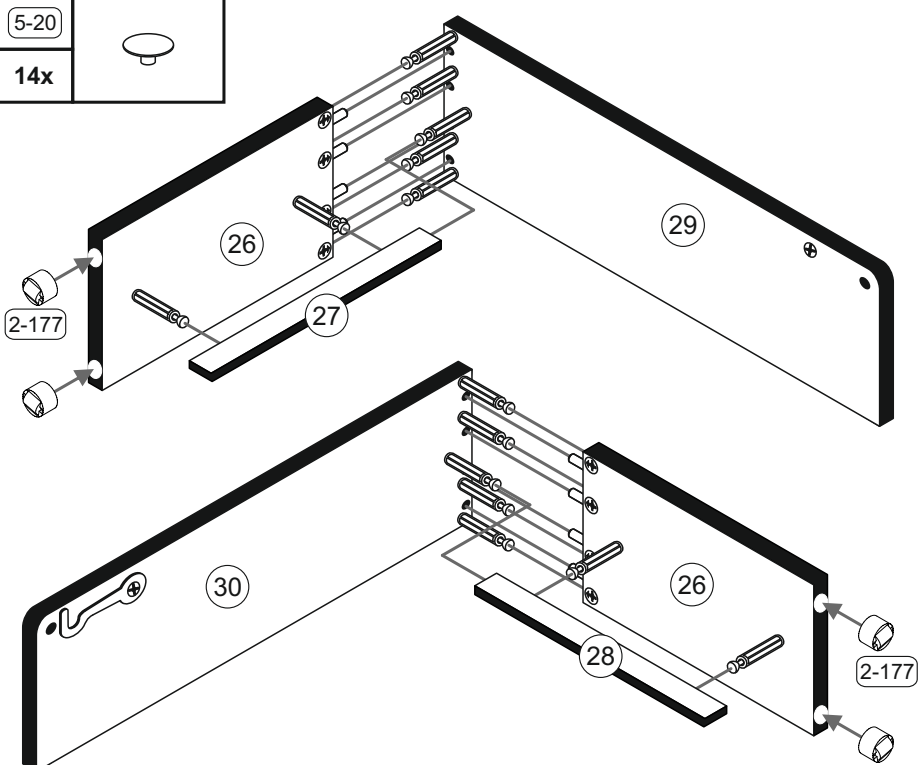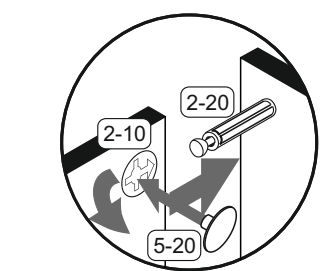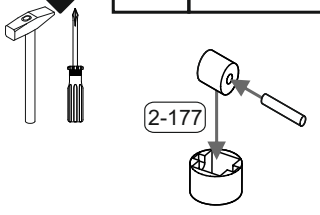


26



1-240		1-295		1-325	
1x	SW 4	2x	M 6x50	2x	

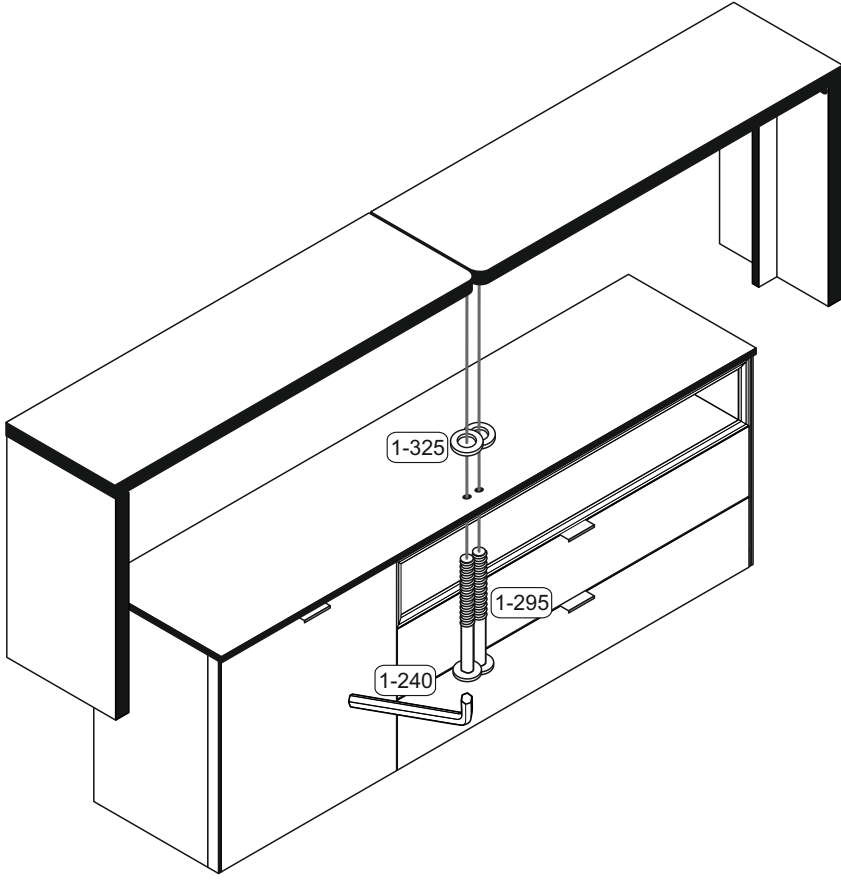

27

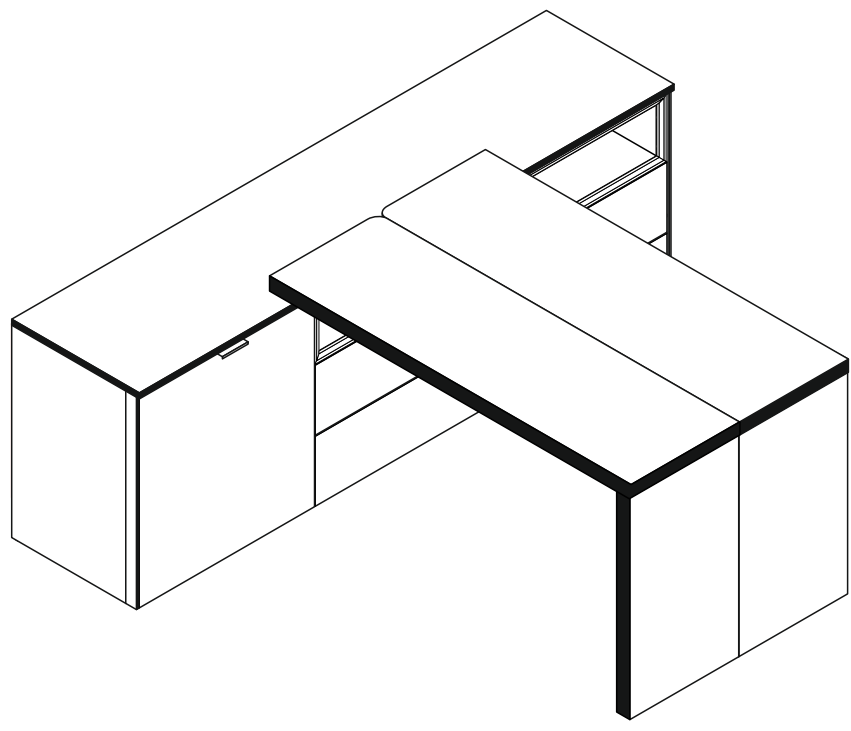

Hersteller :

Mäusbacher
MÖBELFABRIK

Steinachtalstraße 37
 Fax: 09266/990220
 96242 Sonnefeld-Hassenberg
 eMail: support@mausbacher.de

